First Alert®

pod
PROTECTION ON DEMAND

Quick Start Guide

Please read through all of the instructions below before using your POD.

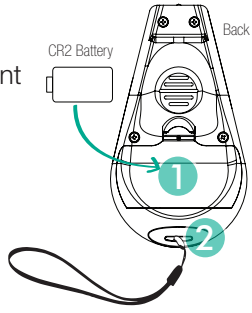

1. Insert battery into battery compartment and snap door into place.

2. Attach lanyard.

3. Bag/Door Alarm:

- **Instant Mode:** Press and hold until you hear one beep. The red light will blink for 20 seconds. Then, POD will be armed. If your POD senses movement or vibration, the alarm will sound immediately. Press and hold to turn alarm off.

- **Alarm Delay Mode:** Press and hold until you hear two beeps. The red light will blink for 20 seconds. Then, POD will be armed. If your POD senses movement or vibration, the alarm will sound after 20 seconds. Press and hold to turn off alarm.

4. LED Light:
Press and hold to turn on.
Release to turn off.

5. Panic Alarm:
Press ⚠ to alarm.
Press and hold ⚠ until you hear two beeps to turn off.

© 2014 BRK Brands, Inc. All rights reserved.
M08-0507-000
Distributed by BRK Brands, Inc.
Consumer Affairs: (800) 323-9005
For warranty and complete user's manual go to www.firstalert.com.

First Alert®

pod
PROTECTION ON DEMAND

Guía de Inicio Rápido

Por favor lea todas las instrucciones a continuación antes de usar su POD.

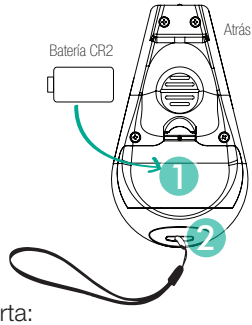

1. Inserte la batería en el compartimiento de la batería y cierre la tapa hasta que encaje en su lugar.

2. Sujete el acollador.

3. Alarma de Bolso/Puerta:

- **Modo Instantáneo:** Presione y mantenga presionado hasta que escuche un bip. La luz roja parpadeará por 20 segundos. Entonces, POD estará armado. Si su POD detecta movimiento o vibración, la alarma sonará inmediatamente. Presione y mantenga presionado para apagar la alarma.

- **Modo de Alarma Retrasada:** Presione y mantenga presionado hasta que escuche dos bips. La luz roja parpadeará por 20 segundos. Entonces, POD estará armado. Si su POD detecta movimiento o vibración, la alarma sonará después de 20 segundos. Presione y mantenga para apagar la alarma.

4. Luz LED:
Presione y mantenga presionado para encender. Suelte para apagar.

5. Panic Alarm:
Presione ⚠ para hacer sonar.
Presione y mantenga presionado ⚠ hasta que escuche dos bips para apagar.

© 2014 BRK Brands, Inc. Todos los derechos reservados.
M08-0507-000
Distribuido por BRK Brands, Inc.
Asuntos del Consumidor: (800) 323-9005
Para la garantía y el manual de usuario completo visite www.firstalert.com.